



7501 East Brundage Lane
Bakersfield, Ca 93307

Office: 661-325-0855
Fax: 661-325-0888

Sno-Kone Machine

Operating Procedure:

Start the motor and fill the gooseneck with ice cubes or block ice broken into pieces 3" to 4" in size. Fill to about an inch or so from the top, the larger the piece of ice the better the snow. Push the pusher handle down to press the ice against the cutterhead. A firm even pressure is all that is required, but sometimes you will find it better to relieve the pressure two or three times on the way down. This lets the ice rearrange itself, and you get a better bite. Do not force the handle too much as motor could be stalled. When too much pressure is necessary, relieve the handle, and then come down again.

DO NOT APPLY PRESSURE ON HANDLE UNTIL MOTOR IS UP TO SPEED

Too much pressure on the pusher handle will make the ice come out coarse; too little pressure makes the ice mushy. In normal operations the motor gets warm – a surface temperature of 150 is normal.

Do not let any metal get down in the gooseneck, or you will ruin the blades.